






WARNING!

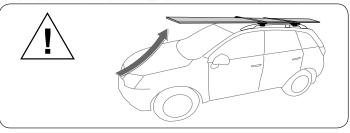


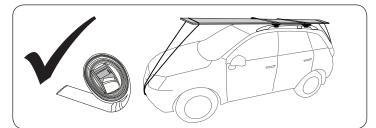


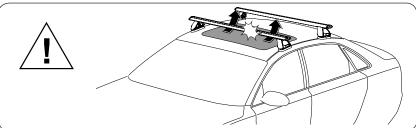


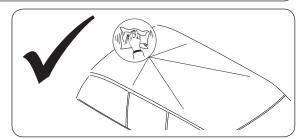

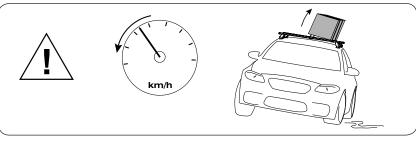

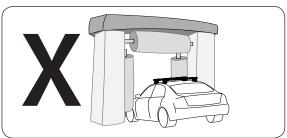


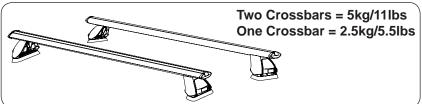


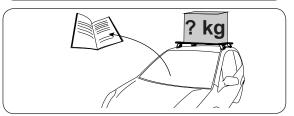

WARNING! Important Load Carrying Instructions

With utility vehicles, the cabin and the canopy move independently. Roofracks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roofracks or the canopy roofracks.

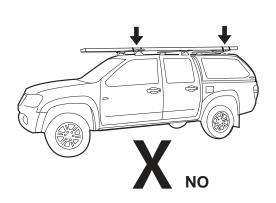

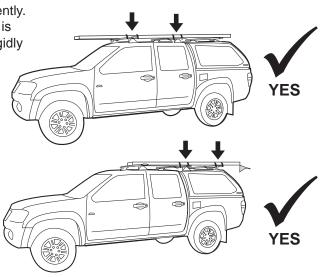

- Please refer to your vehicle manufacturers handbook for maximum roof load capacity.
- Any load transported on Roof Racks must be evenly distributed.
- Instructions are to remain with the vehicle.
- Do not attempt to fit the roof racks to your vehicle unless you fully read and understand the fitting instructions provided.
- Please direct any questions to the dealer from where the roof racks were purchased.
- Check the contents of this kit before commencing fitment and report any discrepancies.



RSP24 / RSP24F / RSP24R Rhino Sportz Crossbars Volkswagen Amarok



Two Crossbars (Urban Road)
Maximum Load Capacity
100kg/220lbs

Two Crossbars (Off-Road)
Maximum Load Capacity
66kg/145lbs

One Crossbar (Urban Road)
Maximum Load Capacity
40kg/88lbs

One Crossbar (Off-Road)

Maximum Load Capacity

26kg/57lbs


Tools required:

Allen key, included.

Torque wrench.

Phillips head screwdriver.

Flat head screwdriver.

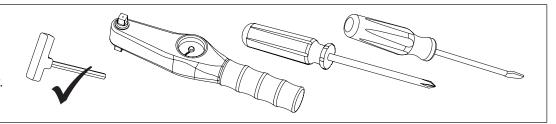

Refer to vehicle manufacturers handbook for maximum roof loading. Always use lower of the two figures.

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your crossbars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

Crossbars must be removed when putting vehicle through an automatic car wash.

Carrying Loads: Use only non-stretch fastening ropes or straps to secure your load.

Caution: The handling characteristics of the vehicle change when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.

Load Ratings:

Maximum permissible load is 100kg (220lbs) for two crossbars including the weight of the crossbars, 5kg (11lbs). When crossbars are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit for off-road use, two crossbars = **66kg 145lbs**). Although the crossbars are tested and approved to AS1235-2000, off-road conditions can be much more rigorous. However, increasing the number of crossbars does not increase the vehicles maximum permissible roof loading.

Note for Dealers and Fitters:

It is your responsibility to ensure instructions are given to the end user or client.

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: R105 Prepared By: Craig Jones Authorised By: Chris Murty

Issue No: 02


Issue Date: 20/09/2012

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.




PARTS LIST


Item	Component	Qty. 2 Bars	Qty. 1 Bar Front	Qty. 1 Bar Rear	Part No.
1	Rubber strip Front 995mm	1	1	0	R011
2	Rubber strip Rear 985mm	1	0	1	R011
3	Crossbar Front 995mm	1	1	0	A155
4	Crossbar Front 985mm	1	0	1	A155
5	Leg	4	2	2	M094
6	M6 x 25mm security screw	4	2	2	B137
7	M6 spring washer	8	4	4	W004
8	M6 flat washer	4	2	2	W003
9	Front Right pad FR	1	1	0	M546
10	Front Left pad FL	1	1	0	M547
11	Rear Right pad RR	1	0	1	M548
12	Rear Left pad RL	1	0	1	M549
13	Rubber skirt Left (short)	2	1	1	M550
14	Rubber skirt Right (short)	2	1	1	M551
15	Rubber skirt Left (long)	2	1	1	M552
16	Rubber skirt Right (long)	2	1	1	M553
17	Trim cover	4	2	2	M560
18	M6 x 30mm socket head cap screw	4	2	2	B047
19	10G x 1/2" phillips screw	4	2	2	B045
20	Pad cover plate	4	2	2	M126
21	M6 x 16mm flat washer	4	2	2	W031
22	3mm x 6mm O-ring	4	2	2	C347
23	Copper/foam washer	4	2	2	C967
24	5mm security allen key	1	1	1	SecKey-S
25	Fitting instruction	1	1	1	R105

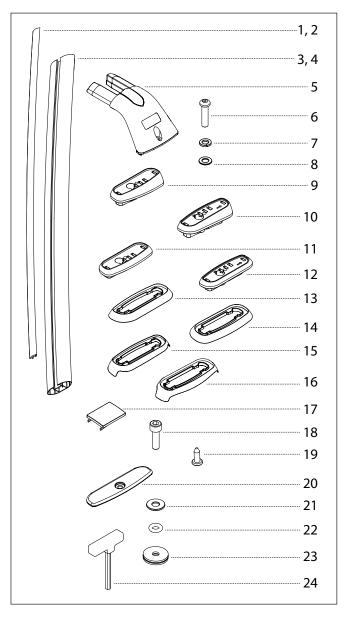

Select Amarok model, with or without roof trim.

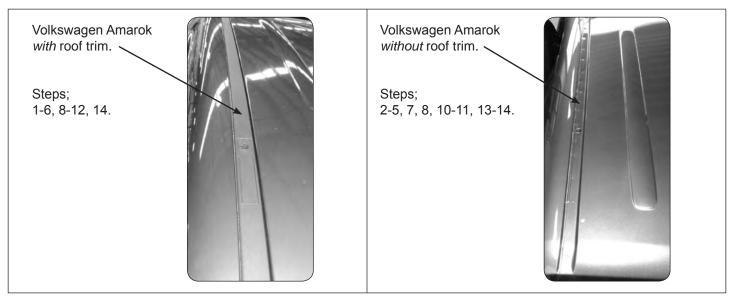




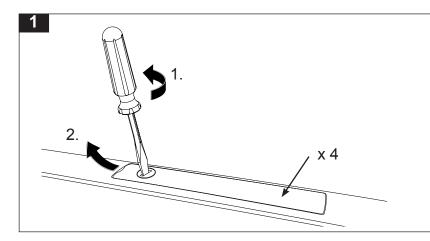


Remove roof covers.

Unscrew half a turn anti-clockwise, remove cover.

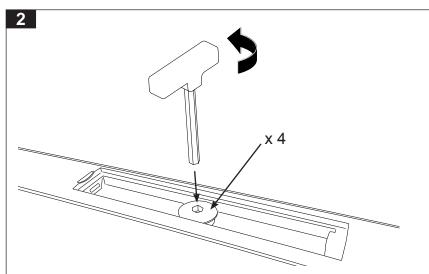


Remove roof screws.

Use supplied allen key.

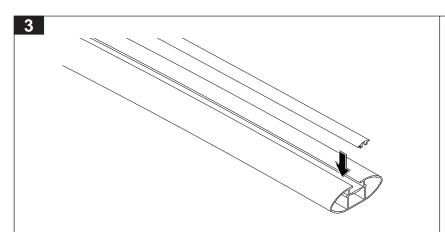

Insert crossbar rubber.


Front = 995mm Rear = 985mm

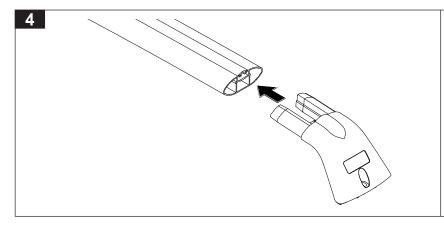

Attach legs to crossbars.


Insert a leg into each end of the crossbars.



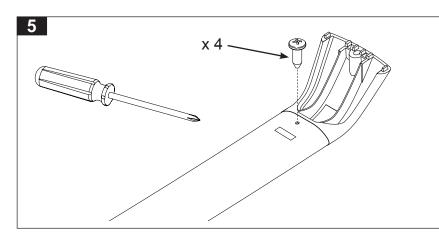

Fasten legs:


From underside of crossbar insert phillips head screw to secure the leg.

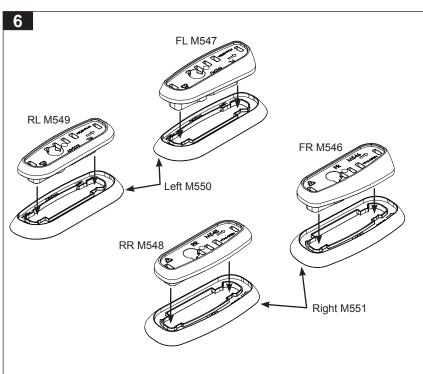


Attach short rubber skirt:

Front Left FL M547
Rear Left RL M549
Front Right FR M546
Rear Right RR M548

Left skirt.....Left M550 Right skirt.....Right M551

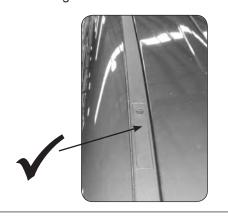


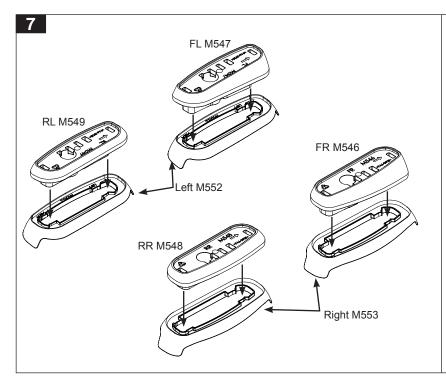



Attach long rubber skirt:


Front Left FL M547 Rear Left.......... RL M549 Front Right....... FR M546 Rear Right RR M548

Left skirt.....Left M552 Right skirt.....Right M553

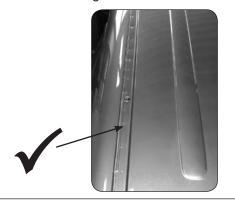

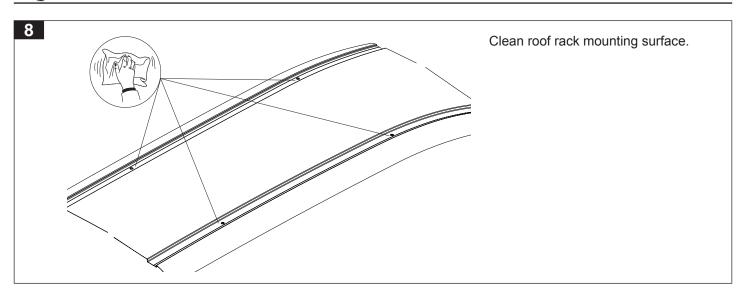

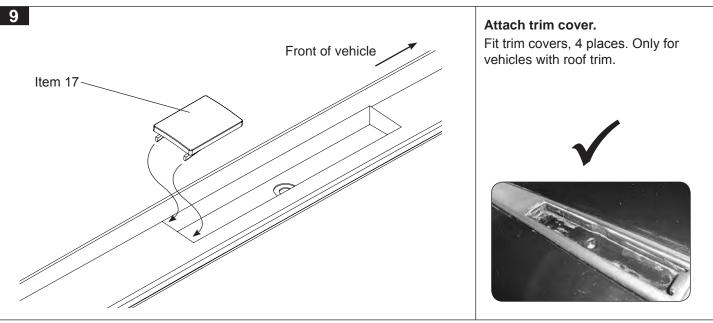

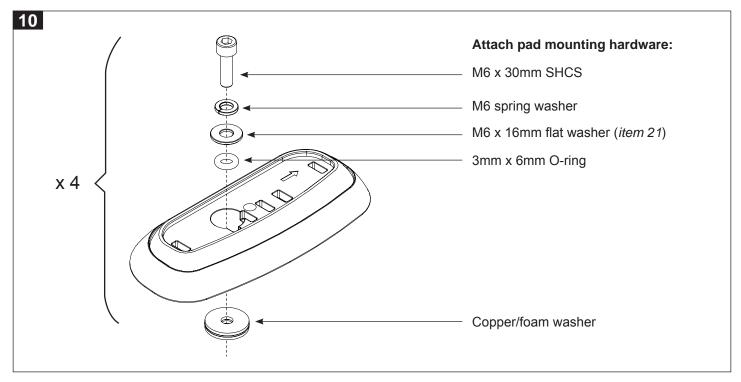



11




Rubber skirt.


Support rubber skirt when fitting to prevent it from folding under.

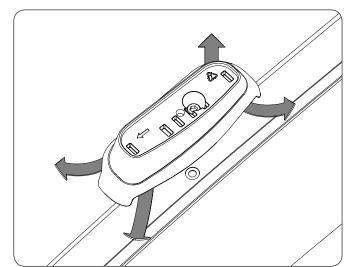

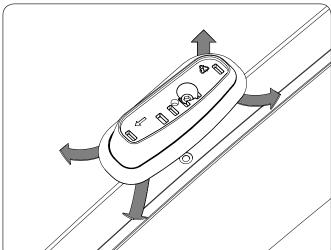

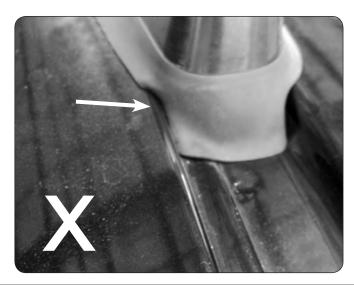



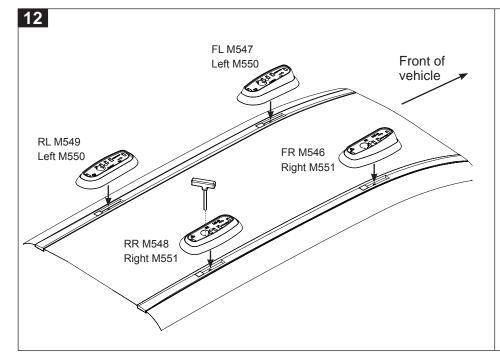


Fit pads to roof.

Fasten pads to roof.

Tighten M6 x 30mm screws, 5-6 Nm.






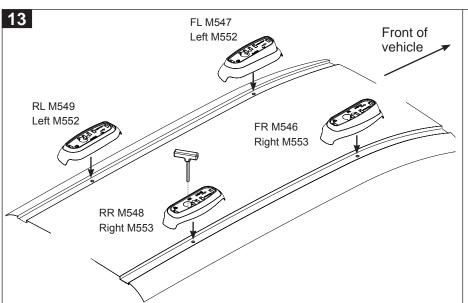


Fit pads to roof.

Fasten pads to roof. Tighten M6 x 30mm screws, 5-6 Nm.



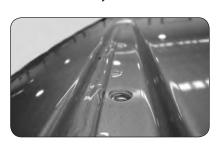


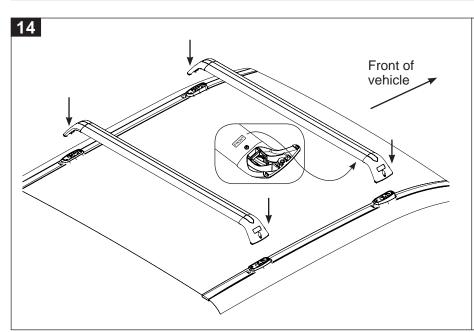


Attach crossbars.

Fasten front & rear crossbars in correct location as shown by stickers on underside of the bar. Tighten screws 3-4 Nm.



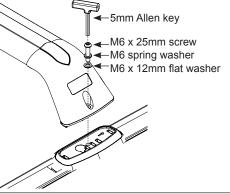

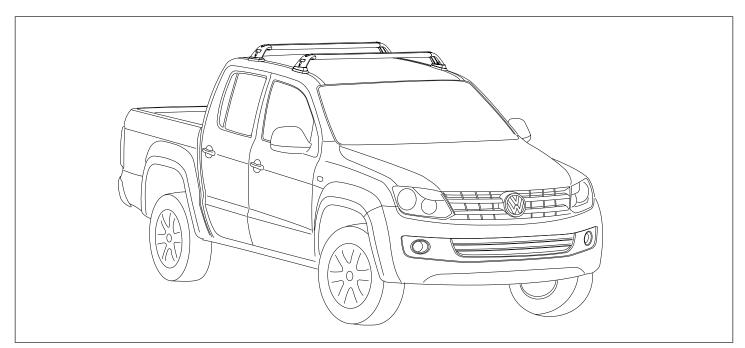



When crossbars are removed.

Attach cover plates (item 20) when crossbars are removed. Fasten screws 3-4 Nm.

