




CONTROLLED

QMFK20

Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Place nuts under factory brackets.
 - Install M6 hardware.
 - Check fixtures are secure before use.
 - Fasten RLT600 base as per instructions.

| Item | Component Name | Qty | Part No. |
|------|-------------------------|-----|----------|
| 1 | M6 x 20 Socket Screw | 4 | B054 |
| 2 | Nissan NV Bracket | 2 | CA1649 |
| 3 | M6 Angled Nut | 4 | N048 |
| 4 | M6 Spring Washer | 4 | W004 |
| 5 | M6 x 12.5mm Flat Washer | 4 | W003 |
| 6 | 5mm Allen Key | 1 | H021 |
| 7 | Instructions | 1 | R1456 |

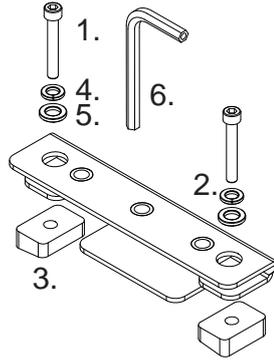

Front view: Be aware of correct nut orientation.



Issue: 01 Document No: R1456 Prepared by: Kayle Everett




CONTROLLED

QMFK20


Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Place nuts under factory brackets.
 - Install M6 hardware.
 - Check fixtures are secure before use.
 - Fasten RLT600 base as per instructions.

| Item | Component Name | Qty | Part No. |
|------|-------------------------|-----|----------|
| 1 | M6 x 20 Socket Screw | 4 | B054 |
| 2 | Nissan NV Bracket | 2 | CA1649 |
| 3 | M6 Angled Nut | 4 | N048 |
| 4 | M6 Spring Washer | 4 | W004 |
| 5 | M6 x 12.5mm Flat Washer | 4 | W003 |
| 6 | 5mm Allen Key | 1 | H021 |
| 7 | Instructions | 1 | R1456 |

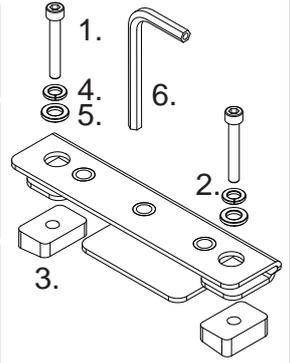

Front view: Be aware of correct nut orientation.



Issue: 01 Document No: R1456 Prepared by: Kayle Everett




CONTROLLED

QMFK20


Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Place nuts under factory brackets.
 - Install M6 hardware.
 - Check fixtures are secure before use.
 - Fasten RLT600 base as per instructions.

| Item | Component Name | Qty | Part No. |
|------|-------------------------|-----|----------|
| 1 | M6 x 20 Socket Screw | 4 | B054 |
| 2 | Nissan NV Bracket | 2 | CA1649 |
| 3 | M6 Angled Nut | 4 | N048 |
| 4 | M6 Spring Washer | 4 | W004 |
| 5 | M6 x 12.5mm Flat Washer | 4 | W003 |
| 6 | 5mm Allen Key | 1 | H021 |
| 7 | Instructions | 1 | R1456 |

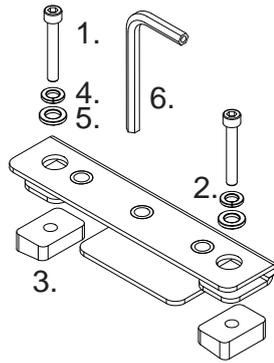

Front view: Be aware of correct nut orientation.



Issue: 01 Document No: R1456 Prepared by: Kayle Everett




CONTROLLED

QMFK20


Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Place nuts under factory brackets.
 - Install M6 hardware.
 - Check fixtures are secure before use.
 - Fasten RLT600 base as per instructions.

| Item | Component Name | Qty | Part No. |
|------|-------------------------|-----|----------|
| 1 | M6 x 20 Socket Screw | 4 | B054 |
| 2 | Nissan NV Bracket | 2 | CA1649 |
| 3 | M6 Angled Nut | 4 | N048 |
| 4 | M6 Spring Washer | 4 | W004 |
| 5 | M6 x 12.5mm Flat Washer | 4 | W003 |
| 6 | 5mm Allen Key | 1 | H021 |
| 7 | Instructions | 1 | R1456 |

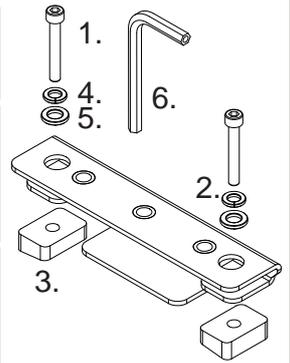

Front view: Be aware of correct nut orientation.



Issue: 01 Document No: R1456 Prepared by: Kayle Everett




CONTROLLED

QMFK20


Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Place nuts under factory brackets.
 - Install M6 hardware.
 - Check fixtures are secure before use.
 - Fasten RLT600 base as per instructions.

| Item | Component Name | Qty | Part No. |
|------|-------------------------|-----|----------|
| 1 | M6 x 20 Socket Screw | 4 | B054 |
| 2 | Nissan NV Bracket | 2 | CA1649 |
| 3 | M6 Angled Nut | 4 | N048 |
| 4 | M6 Spring Washer | 4 | W004 |
| 5 | M6 x 12.5mm Flat Washer | 4 | W003 |
| 6 | 5mm Allen Key | 1 | H021 |
| 7 | Instructions | 1 | R1456 |

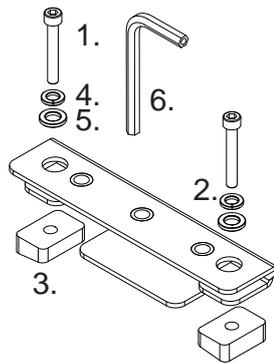

Front view: Be aware of correct nut orientation.



Issue: 01 Document No: R1456 Prepared by: Kayle Everett




CONTROLLED

QMFK20


Please refer to 'Fit My Car' on the Rhino-Rack web site for comprehensive instructions on fitting racks to your vehicle.

- *Note:** RLT600 Parts as separate.
- Place nuts under factory brackets.
 - Install M6 hardware.
 - Check fixtures are secure before use.
 - Fasten RLT600 base as per instructions.

| Item | Component Name | Qty | Part No. |
|------|-------------------------|-----|----------|
| 1 | M6 x 20 Socket Screw | 4 | B054 |
| 2 | Nissan NV Bracket | 2 | CA1649 |
| 3 | M6 Angled Nut | 4 | N048 |
| 4 | M6 Spring Washer | 4 | W004 |
| 5 | M6 x 12.5mm Flat Washer | 4 | W003 |
| 6 | 5mm Allen Key | 1 | H021 |
| 7 | Instructions | 1 | R1456 |

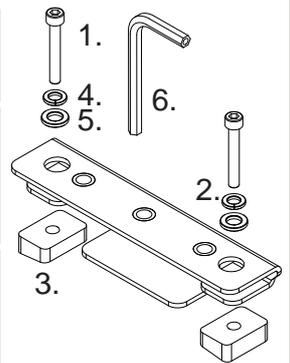

Front view: Be aware of correct nut orientation.



Issue: 01 Document No: R1456 Prepared by: Kayle Everett