



# RHINO-RACK

## RTW01 Wedge Kit


**Important:** Please read these instructions carefully prior to installation. Check the contents of this kit before commencing fitment and report any discrepancies.

### Important Information

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822	Document No: R1066 Prepared By: Kayle Everett Authorised By: Chris Murty	Fit Time: 15min Issue No: 01 Issue Date: 01/07/2016
----------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------	-----------------------------------------------------------

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Item	SUB0673	Qty	Part No.
1	M6 x 40mm Socket Head Cap Screw	4	B033
*2	M6 Spring Washer	4	W004
*3	M6 x 12.5mm Flat Washer	4	W003
*4	RLTP Leg	2	M057
5	RLTP Tray Spacer	2	M864
*6	M6 Brass Nut	4	N009
*7	Torque Security Key Short	1	TORKEY-S
*8	M10 Channel Nut	2	N024
*9	M10 x 38mm Flat Washer	2	W022
*10	M10 Internal Shake Proof Washer	2	W021
*11	M10 x 25mm Hex Bolt	2	B071
12	Instructions	1	R1066

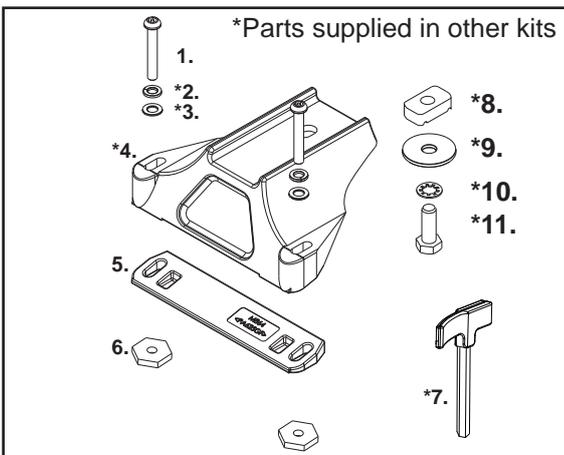

**Note:** Bars and adaptor kits sold as separate.  
**Tools Required:** - Torque Allen Key (provided).

### Fitment Instructions

**1** Slide four M6 Square Nuts in both sides of the installed tracks from the rear.

**3** The Crossbars should be spaced between 700mm and 800mm apart.

**2** Install the Legs into the M6 Nuts as shown. Tighten with Torque Allen Key provided.

Labels in diagram:  
 RLTP Leg  
 M6 x 40mm Socket HD Security Screw  
 M6 Spring Washer  
 M6 x 12.5mm Flat Washer  
 Tray Spacer

**Note:** High side of Spacer faces inside of vehicle.