



# RHINO-RACK

## Ford Wildtrack Mountain Top Roller Shutter Wedge Kit RTW02

**Important:** Please read these instructions carefully prior to installation.  
Check the contents of this kit before commencing fitment and report any discrepancies.

### Important Information

**Maximum carrying capacity: 25kg/55lbs evenly distributed over all crossbars.**

**Please refer to your vehicle manufacturers handbook for maximum carrying capacity of your roof racks.**

Always use the lower of the two figures. Load must be evenly distributed over the crossbars. Maximum permissible load is 25kg/55lbs (including the weight of the crossbars, 5kg/11lbs). When roof racks are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit, 17kg/37lbs for off-road conditions. Although the roof racks are tested and approved to AS1235-2000, road conditions can be much more rigorous. However, increasing the number of crossbars does not increase the vehicles maximum permissible roof loading. Do not attempt to fit the crossbars to your vehicle unless you fully understand this fitting instructions. Please direct any questions regarding fitting to the dealer from where the kit was purchased. **Use only non-stretch fastening ropes or straps.**

**Recommendations:** It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a fortnight is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible. Long loads (e.g. canoes and kayaks) must be secured front and rear with non-stretch fastening ropes or straps.

**Roof racks must be removed when putting vehicle through an automatic car wash.**

**Caution:** The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.

**Note for Dealers and Fitters:** It is your responsibility to ensure these fitting instructions are given to the end user or client

Rhino-Rack  
3 Pike Street, Rydalmere,  
NSW 2116, Australia.  
(Ph) (02) 9638 4744  
(Fax) (02) 9638 4822


Document No: R1016  
Prepared By: Kayle Everett  
Authorised By: Chris Murty

Fit Time: 15min  
Issue No: 02  
Issue Date: 01/08/2016

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

### Fitment Instructions

Item	RTW02	Qty	Part No.
1	M6 x 40mm Socket Head Cap Screw	8	B033
*2	M6 Spring Washer	8	W004
*3	M6 x 12.5mm Flat Washer	8	W003
*4	RLTP Leg	4	M057
5	RLTP Tray Spacer	4	M864
6	M6 Foam Special Nut	8	N018
*7	Torque Security Key Short	1	TORKEY-S
*8	M10 Channel Nut	1	N024
*9	M10 x 38mm Flat Washer	1	W022
*10	M10 Internal Shake Proof Washer	1	W021
*11	M10 x 25mm Hex Bolt	1	B071
12	Instructions	1	R1016

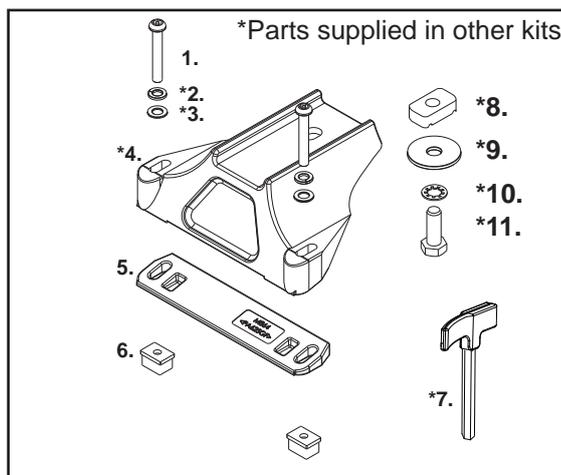

**Note:** Bars and adaptor kits sold as separate.


**Tools Required:**  
- Torque Allen Key (provided).

Vortex Crossbar Setup	Qty	Part No.
Vortex Crossbar Adaptor	2	VAFK1
1500mm Vortex Crossbar	2	VA1500S/B
Heavy Duty Crossbar Setup	Qty	Part No.
1500mm Vortex Crossbar	2	VA1500S/B




# Ford Wildtrack Mountain Top Roller Shutter Wedge Kit RTW02

**1** 1: Move to the tub of the vehicle. Remove the rubber plugs closest to the cabin in the tracks on either side of the tub.

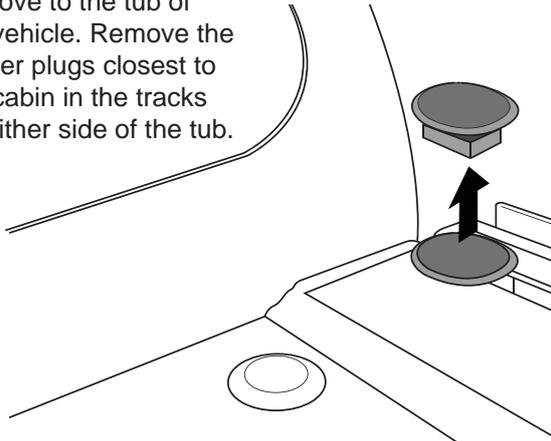

2: With the plugs removed, slide four M6 Foam Special Nuts in both sides, foam side down.

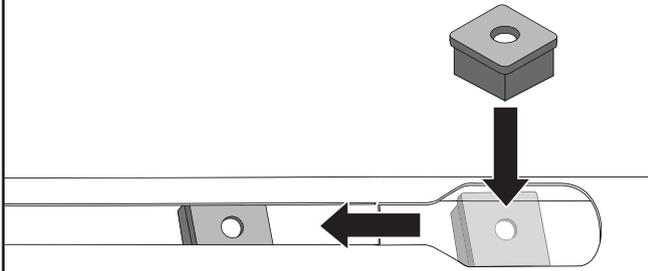


**2** Install the Legs into the Foam Special Nuts as shown. Tighten with Torque Allen Key provided.

RLTP Leg


M6 x 40mm  
Socket HD  
Security Screw

M6 Spring  
Washer  
M6 x 12.5mm  
Flat Washer

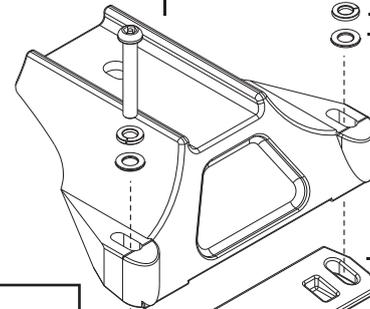

Tray Spacer

**Note:**  
High side  
of Spacer  
faces inside  
of vehicle.

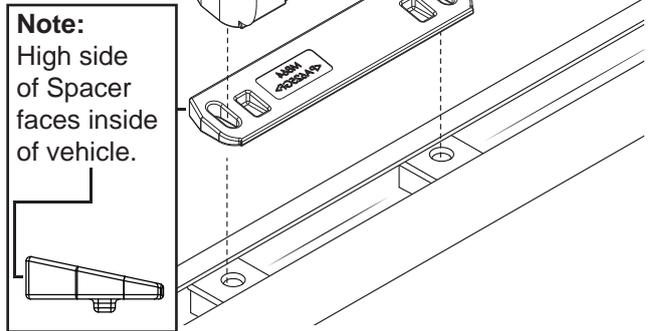

**3** The Crossbars should be spaced between 700mm and 800mm apart.

700mm-800mm

