



# RHINO-RACK

## PLHSPAIR - Pioneer Leg Height Spacer

Place these instructions in the vehicle's glove box after installation is complete.

**Important:** Please read these instructions carefully prior to installation.  
Please refer to your fitting instruction to ensure that the alloy tray is installed correctly.  
Check the contents of this kit before commencing fitment and report any discrepancies.


| Item | Component Name            | Qty | Part No. |
|------|---------------------------|-----|----------|
| 1    | Pioneer Leg Height Spacer | 2   | M609     |
| 2    | M10 x 35mm Hex Screw      | 2   | B079     |
| 3    | Fitting Instructions      | 1   | R213     |

### Care Instruction

Clean alloy tray prior to fitting the Pioneer leg height spacers.


### Tools Required

16mm Spanner

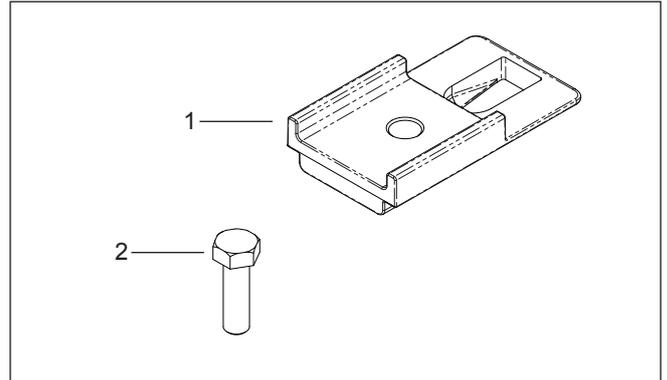


### Fit legs to tray

Fit the leg to the tray as specified in the fitting instruction.  
Make sure the head of the M8 dome bolt sits within the leg height spacer as shown.

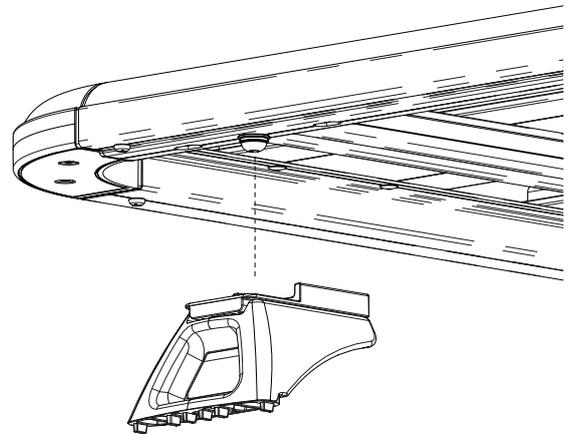

### Note:

The end of the leg height spacer can be cut away with a hacksaw if required.

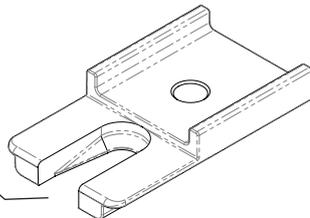

Rhino-Rack  
3 Pike Street, Rydalmere,  
NSW 2116, Australia.  
(Ph) (02) 9638 4744  
(Fax) (02) 9638 4822

Document No: R213  
Prepared By: Nigel Greig  
Authorised By: Chris Murty

Issue No: 02  
Issue Date: 06/08/2013

These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.